
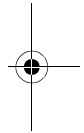


Cat. No. 60-4222
OWNER'S MANUAL

Please read before using this equipment.

Triton™ X-1

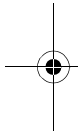

RadioShack®



INTRODUCTION

Your RadioShack Triton X-1 handles the road in style, whether in the hallway of your house or on the sidewalk outside. Use the Triton X-1's transmitter to make the car travel in any direction. Built to $\frac{1}{20}$ scale, it can reach speeds up to 350 feet per minute.

The Triton X-1 comes in two frequencies, 27 MHz or 49 MHz. You can compete with a friend, provided you and your friend use different frequencies. Check the car's box to see which frequency your car uses.

Note: You need these items (not supplied) to power the Triton X-1:

- one 9V battery for the transmitter
- four AA batteries for the car

THE FCC WANTS YOU TO KNOW

The Triton X-1 or its transmitter might cause TV or radio interference even when they are operating properly. To determine whether your car or its transmitter is causing the interference, turn off your car and its transmitter. If the interference goes away, your car or its transmitter is causing it.

Try to eliminate the interference by:

- moving your Triton X-1 and its transmitter away from the TV or radio
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Triton X-1 and its transmitter.

© 1999 Tandy Corporation.
All Rights Reserved.

Triton is a trademark used by Tandy Corporation.
RadioShack is a registered trademark used by Tandy Corporation.

PREPARATION

INSTALLING BATTERIES

Warning: Dispose of old batteries properly; do not bury or burn them.


Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- Never leave dead or weak batteries in the Triton X-1.

In the Transmitter

The transmitter requires one 9V battery for power. For the best performance and longest life, we recommend a RadioShack alkaline battery.

Follow these steps to install the transmitter's battery.

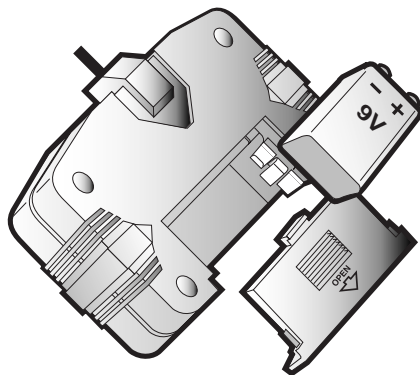


1. Slide **ON/OFF** on the transmitter to **OFF**.
2. Slide the battery compartment cover in the direction of the arrow to remove it.
3. Put the battery in the compartment according to the polarity symbols (+ and -) marked inside.
4. Replace the cover so it snaps shut.

When the transmitter's range decreases, replace its battery.

In the Triton X-1

The Triton X-1 requires four AA batteries for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

Follow these steps to install batteries in the Triton X-1.

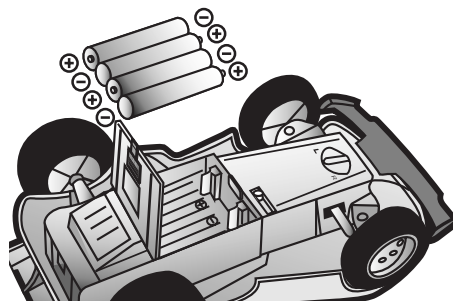

1. Slide **ON/OFF** on the bottom of the car to **OFF**.
2. Slide the battery compartment's latch in the direction of the arrows on the cover, then lift the cover open.
3. Put the batteries in the compartment according to the polarity symbols (+ and -) marked inside.
4. Close the cover and slide the battery compartment's latch to lock it.

If your Triton X-1 moves slowly or not at all, replace its batteries.

Caution: If you will not be using the Triton X-1 for several days, remove the batteries. Batteries can leak chemicals that can damage your car's electronic parts.


OPERATION

DRIVING THE TRITON X-1

Warnings:


- To avoid crashes, always watch where the Triton X-1 is going.
- Never play with the Triton X-1 in the street.

1. Slide **ON/OFF** on the bottom of the car to **ON**.

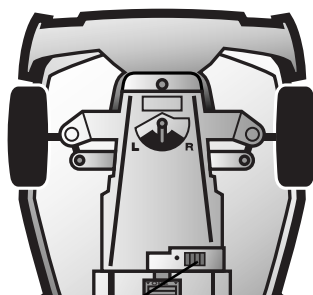

ON/OFF Switch

2. Slide **ON/OFF** on the transmitter to **ON**.
3. Use the transmitter's levers to control the movement and direction of the Triton X-1.

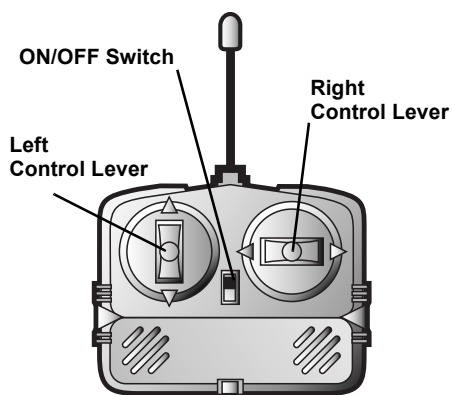


Left Control Lever — Push forward to move forward. Pull back to move backward. Release to stop.

Right Control Lever — Push left to turn left. Push right to turn right. Release to go straight.

4. When you finish driving the Triton X-1, slide **ON/OFF** on both the car and the transmitter to **OFF**.

WHEEL ALIGNMENT

If the Triton X-1 does not drive in a straight line when you release the right control lever, adjust the wheel alignment control on the bottom of the Triton X-1. Rotate the control to the left if the car is pulling to the right, or to the right if the car is pulling to the left.

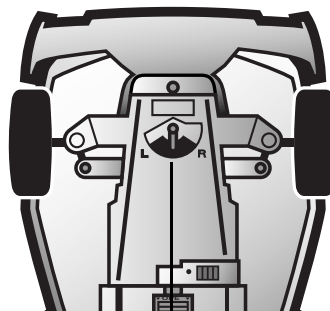

Wheel Alignment Control

CARE

The following suggestions will help you care for the Triton X-1 so you can enjoy it for years.

- Do not drive the car through puddles or mud, on a wet floor, or in sand, rain, or snow. These can damage it.
- Do not expose the car or transmitter to temperature extremes, and do not store them in direct sunlight or near a heat source.
- Do not leave the car or transmitter outside overnight. Night dampness can damage their electronic circuits.
- To protect the car's mechanisms from lint and hair, do not drive the car on carpet.
- Wipe the car and transmitter with a damp cloth occasionally to keep them looking new. Do not use harsh chemicals to clean them.

Modifying or tampering with the car's or transmitter's internal components can cause a malfunction and might invalidate the car's warranty and void your FCC authorization to operate it. If your car is not performing as it should, take it and the transmitter to your local RadioShack store for assistance.

HELPFUL HINTS

Follow these hints to get the most enjoyment from the Triton X-1.

- Running your car continuously for long periods causes wear and tear on the motor. To help keep heat levels down, when your car's battery dies, let the car cool at least 10 minutes before installing new batteries.
- If someone uses a CB nearby, it might interfere with control of the car. If this happens, move the car away from the CB.
- You cannot operate your car near devices with transmitters that use the same frequency as your car (27 MHz or 49 MHz). Check your car's box for its frequency.
- If the car moves slowly, and you have installed fresh batteries, check the wheel mechanisms and remove any lint, thread, hair, or dust you see.
- Be sure the car is not out of the transmitter's range (about 80 feet). The range depends on the surroundings and on battery strength. Obstructions (such as buildings, fences, and so on) between the transmitter and the car reduce the range.

USER REPLACEABLE PARTS

You can order these parts through your local RadioShack store.

Ref. No.	Description	RSU #	NP Part #
1	Battery Door (Car)	DB-91006	12169504
2	Battery Door (Transmitter)	DB-91007	12169512
3	Bumper (Car)	Z-91914	12169546
4	Rims (Front Wheel)	Z-91915	12169553
5	Rims (Rear Wheel)	Z-91916	12169561
6	Tires (Front Wheel)	Z-91952	12174181
7	Tires (Rear Wheel)	Z-91917	12169579
8	Transmitter (27 MHz)	ZA-90200	12169520
9	Transmitter (49 MHz)	ZA-90201	12169538
10	Owner's Manual	MU-6004222	12169587

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

06A99

Printed in Hong Kong